


Wind Velocity Map

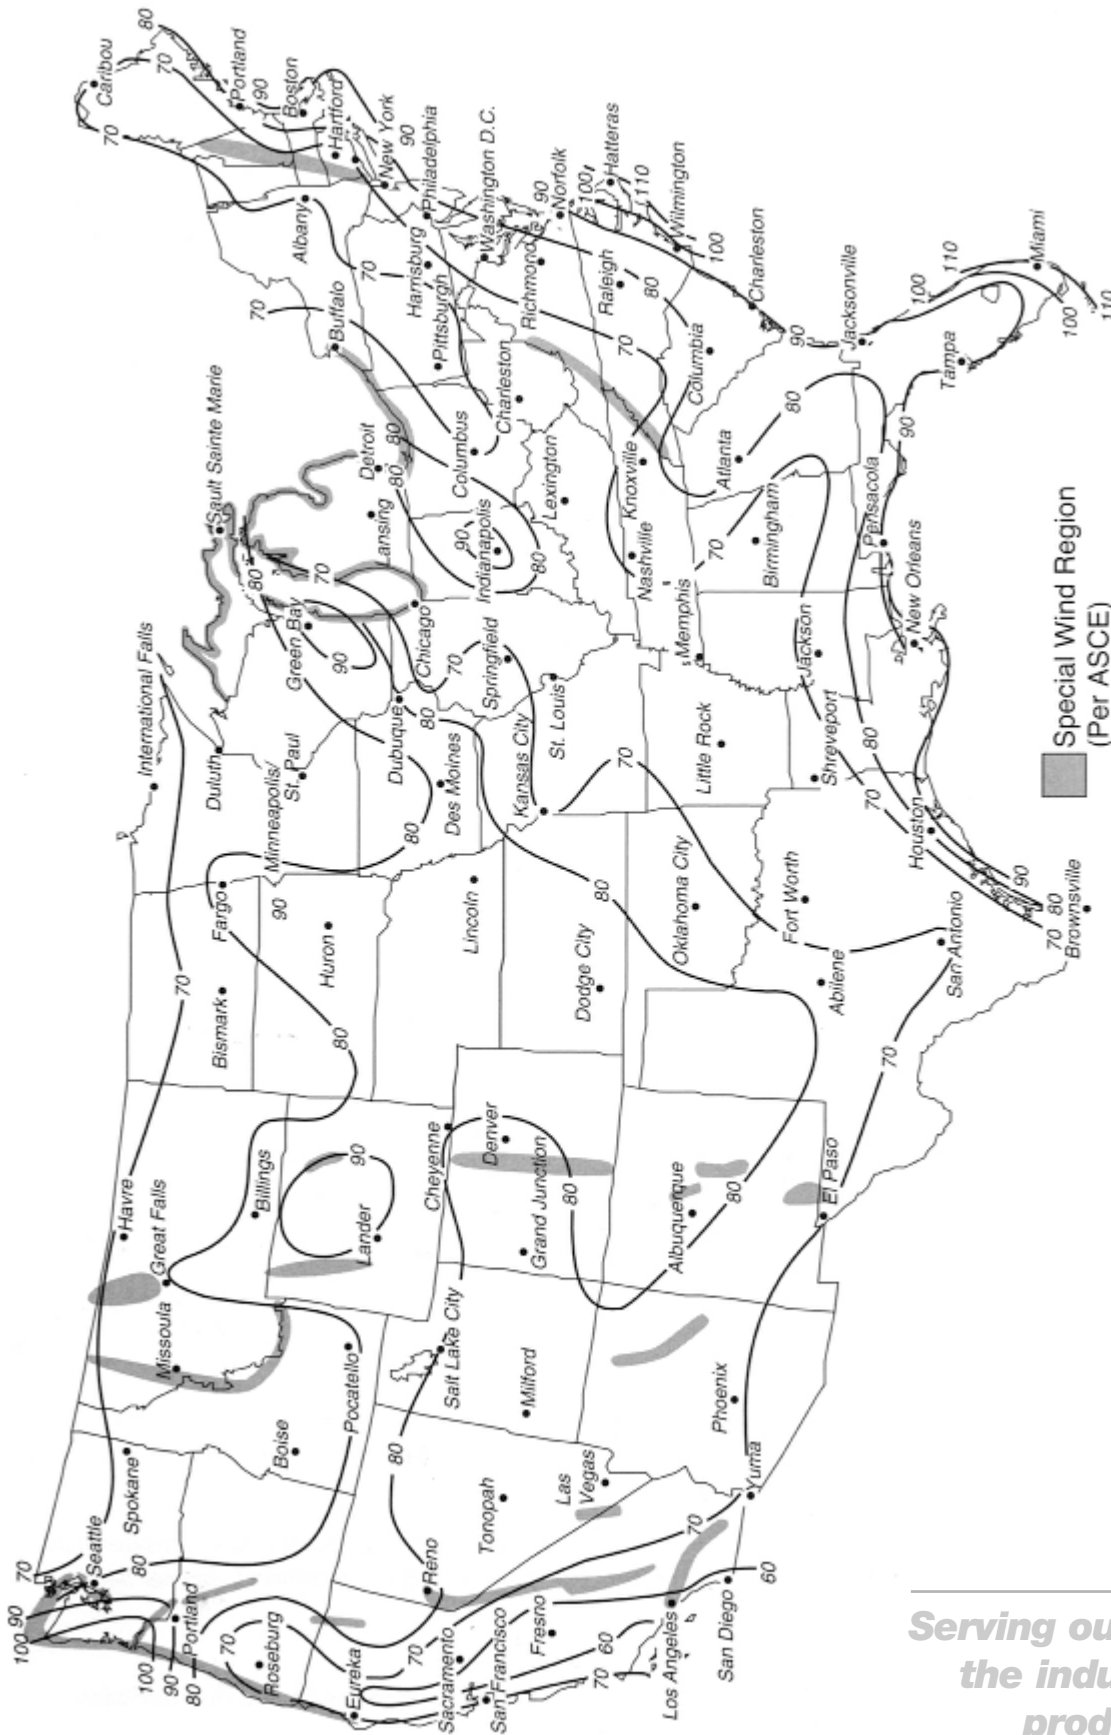

To aid you in selecting the correct pole for your geographic location, please refer to the above map which illustrates the maximum expected wind velocities across the United States.

The maximum allowable luminaire square footage for each pole for a particular wind zone will be found in our loading data.

Our loading provides for a 1.3 gust factor and is based upon ground level installations.

Serving our customers and the industry with quality products since 1973.